


Components included:

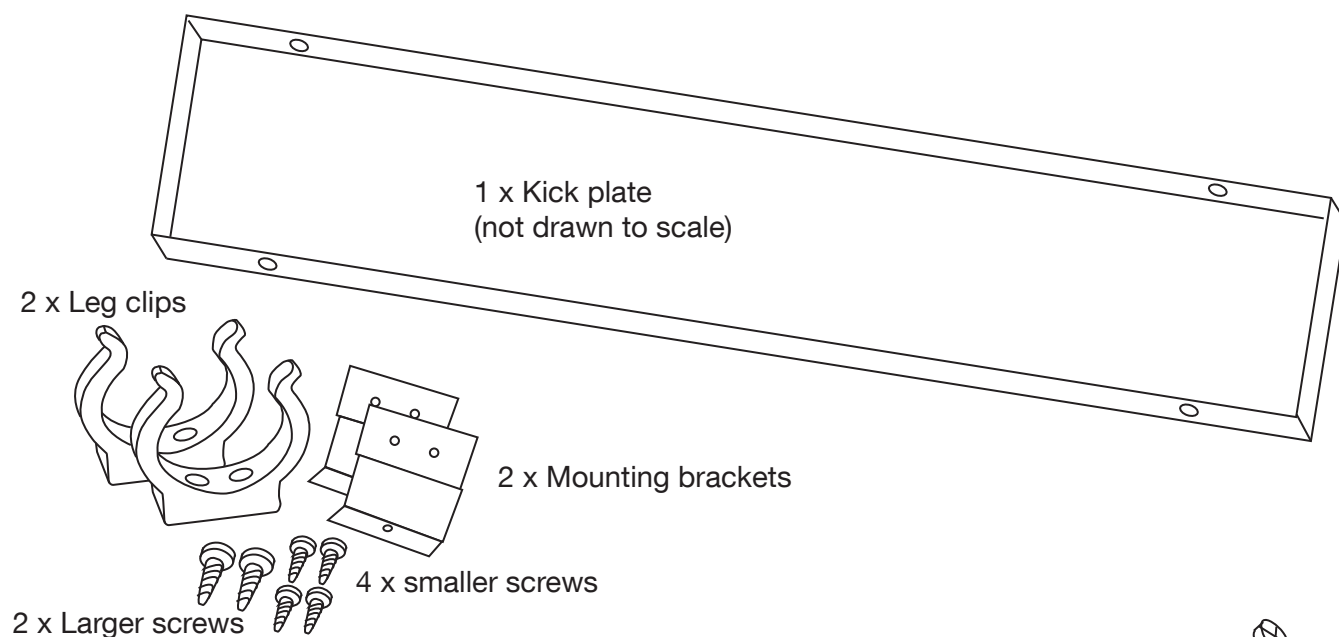

Assembly

1. Using the smaller screws attach the leg clips onto the mounting brackets.
2. Using the larger screw attach the mounting bracket to the kick plate.
3. The assembled kick plate attaches to the cooker by snapping the leg clips onto the legs of the cooker. The cooker height may need to be adjusted to suit the height of the kickplate (140mm).

